

TraceTek TT-TAR

TRACETEK ANALOG CURRENT TRANSDUCER INSTALLATION INSTRUCTIONS




DESCRIPTION

These instructions provide guidance for installation and use of the TraceTek TT-TAR 4-20 mA transducer. The TT-TAR transducer is suitable for installation in hazardous areas and controls an analog current loop signal that transmits status information to monitoring equipment installed in a safe area. When installed with TraceTek sensor cable or TraceTek sensor probes, the TT-TAR controls a current loop signal such that the condition of the sensor cable or probe is indicated by the magnitude of the current flowing in the loop.

REQUIRED ACCESSORIES

- Enclosure, junction box or marshalling panel in the hazardous area to provide mechanical protection for TT-TAR transducer
- 3 position terminal block
- Repeater Power Supply:
 - Measurement Technologies Ltd.
 - Model MTL5541 or MTL5541AS
- Two-conductor interconnection wire/cable meeting local site requirements with minimum cross-section of 1.0 mm² (18 AWG)

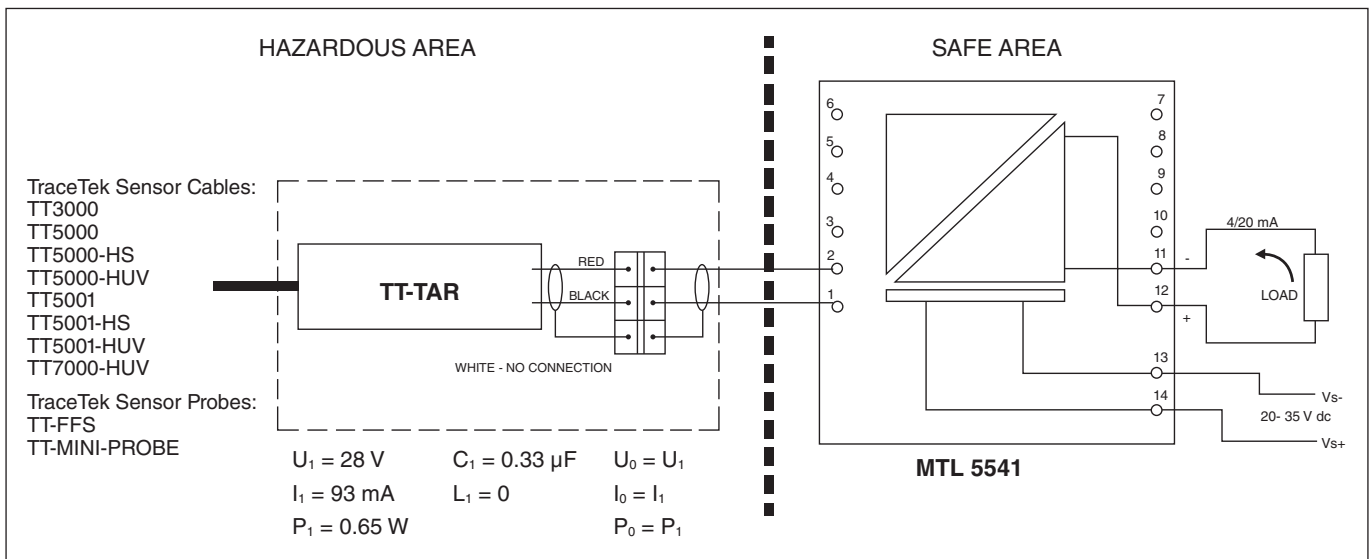

INSTALLATION NOTES

Do not exceed 250 m (820 ft) of TraceTek sensor cable, 10 TT-Mini-Probes or 4 TT-FFS probes.

Use TT-MBC-MC-BLK to connect more than one sensor cable/probe.

- The connection between TT-TAR and MTL5541 requires two conductors.
- Minimum cross-section conductor size is 1.0 mm² (18 AWG).
- Cable construction should conform to local wiring practices.
- Maximum distance between MTL 5541 Repeater Power Supply and TT-TAR is 1000 m (3280 ft).

Install MTL5541 Repeater Power Supply (Galvanic Isolation Barrier) in accordance with MTL 5500 Series Instruction Manual INM5500. (Note that MTL5541AS can be substituted if the host system requires a current sink device).

APPROVALS

TT-TAR Unit	TT-TAR SYSTEM
Baseefa11ATEX0276X	Baseefa11Y0277
IECEX BAS 11.041X	IECEX BAS 11.0142
Ⓢ II1G	Ex ia IIA T4
Ex ia IIA T4 Ga [-40°C =< ta =< 60°C]	IEC/EN 60079-25:2010
IEC 60079-0:2011	
IEC 60079-11:2011	
EN 60079-11:2007	

OPERATION

The TT-TAR is energized by the MTL5541 when a 20-35V dc power supply is connected to Terminals 13 and 14 of the MTL5541 Repeater Power Supply. No local power is required at the TT-TAR.

The amount of current that flows in the current loop between the MTL5541 and the TT-TAR is dependent on the condition/status of the sensor cable or sensor probes connected to the TT-TAR.

The magnitude of current flowing in the loop between the MTL5541 and the TT-TAR is repeated between terminals 11 and 12 of the MTL5541.

Sensor cable/probe status is indicated according to this table:

- 0 mA = Wire break between MTL5541 and TT-TAR
- 4 mA = Sensor cable/probe disconnected from TT-TAR or Sensor cable/probe damage
- 6-9 mA = Sensor cable/probe NORMAL
- > 18 mA = LEAK detected

For host systems with limit settings, the recommended low alarm is 5 mA and the recommended high alarm is 10 mA.

CONDITIONS OF SAFE USE

The plastic enclosure poses a potential electrostatic hazard; do not rub or use solvents, clean only with a damp cloth.



WWW.THERMAL.PENTAIR.COM

NORTH AMERICA

Tel: +1.800.545.6258
Fax: +1.800.527.5703
Tel: +1.650.216.1526
Fax: +1.650.474.7215
thermal.info@pentair.com

EUROPE, MIDDLE EAST, AFRICA

Tel: +32.16.213.511
Fax: +32.16.213.603
thermal.info@pentair.com

ASIA PACIFIC

Tel: +86.21.2412.1688
Fax: +86.21.5426.2917
cn.thermal.info@pentair.com

LATIN AMERICA

Tel: +55.11.2588.1400
Fax: +55.11.2588.1410
thermal.info@pentair.com

Pentair and TraceTek are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

© 2012-2013 Pentair.