


HOT WATER TEMPERATURE MAINTENANCE

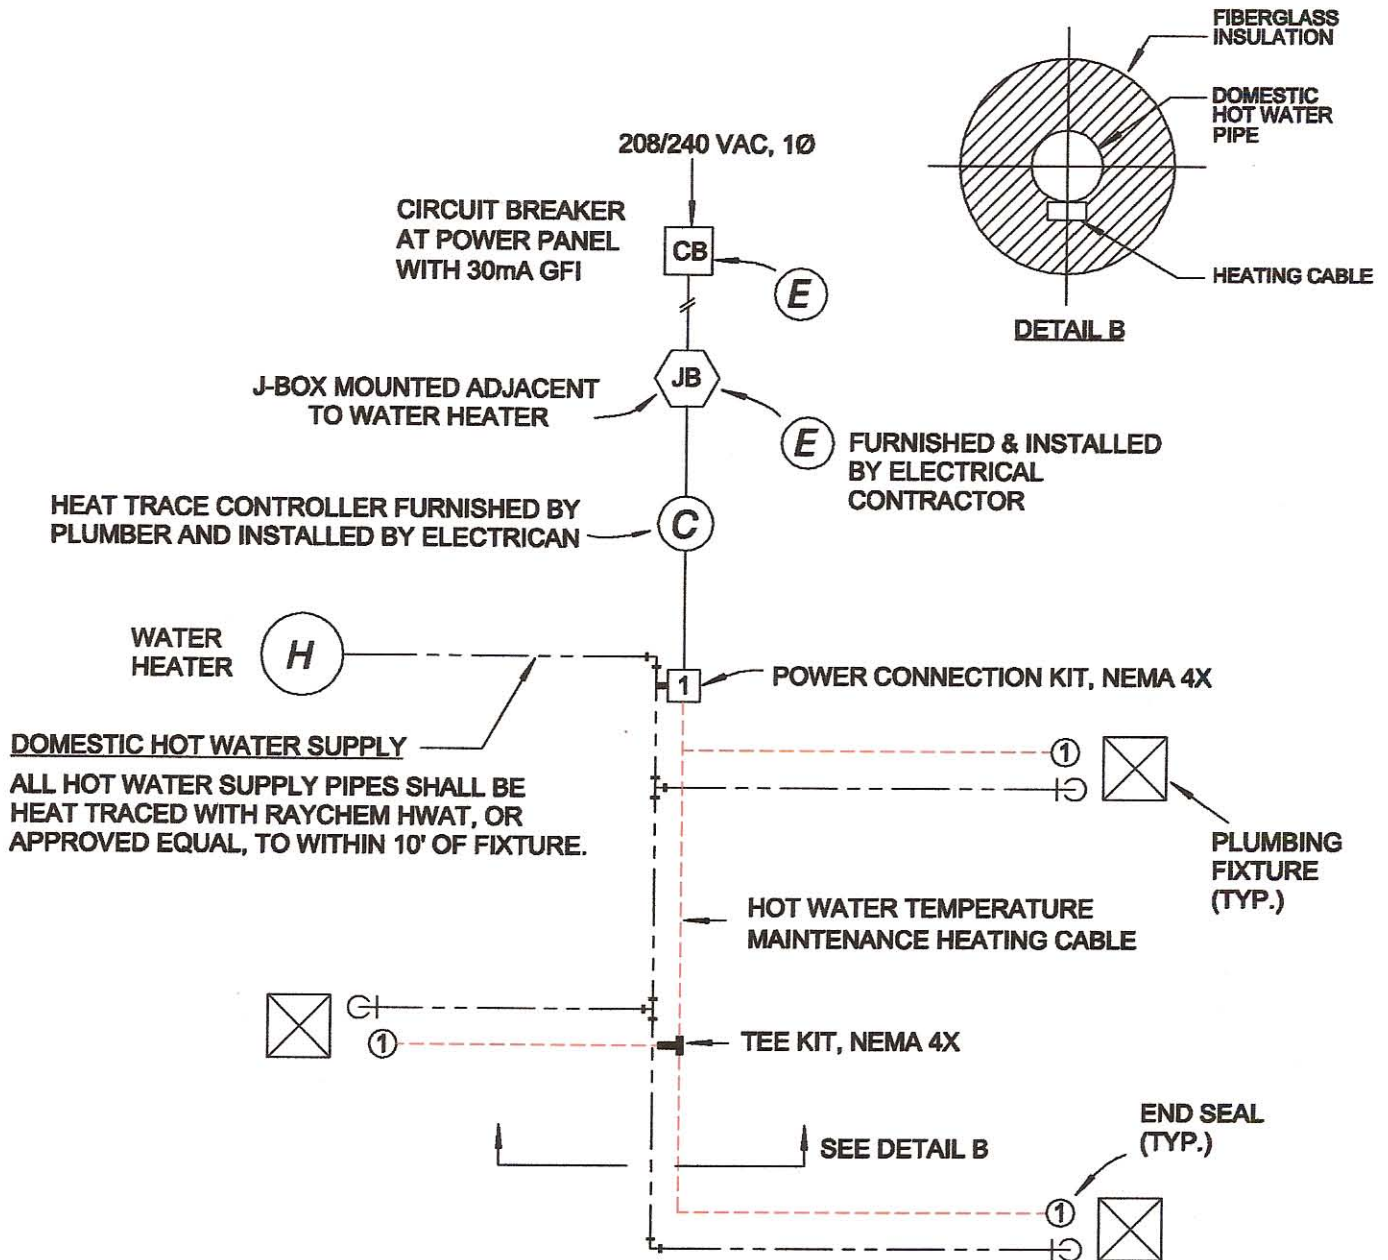

- NOTES:**
1. HEATING CABLE AND COMPONENTS SHALL BE A U.L. LISTED SYSTEM.
 2. SECURE HEATING CABLE TO HOT WATER SUPPLY PIPE AT 12 INCH INTERVALS WITH GT-66 CLASS CLOTH TAPE.
 3. APPLY "CAUTION" LABELS TO EXTERIOR OF INSULATION AT 10' INTERVALS.
 4. FOLLOW HEATING CABLE DESIGN GUIDE FOR INSULATION THICKNESS.
 5. HEATING CABLE INSTALLATION AND TESTING PER MANUFACTURER'S REQUIREMENTS.